


EXTERIOR COLUMN COVER "ROUNDER" INSTALLATION INSTRUCTIONS

Multi-Height (Stacked Unit) Installations

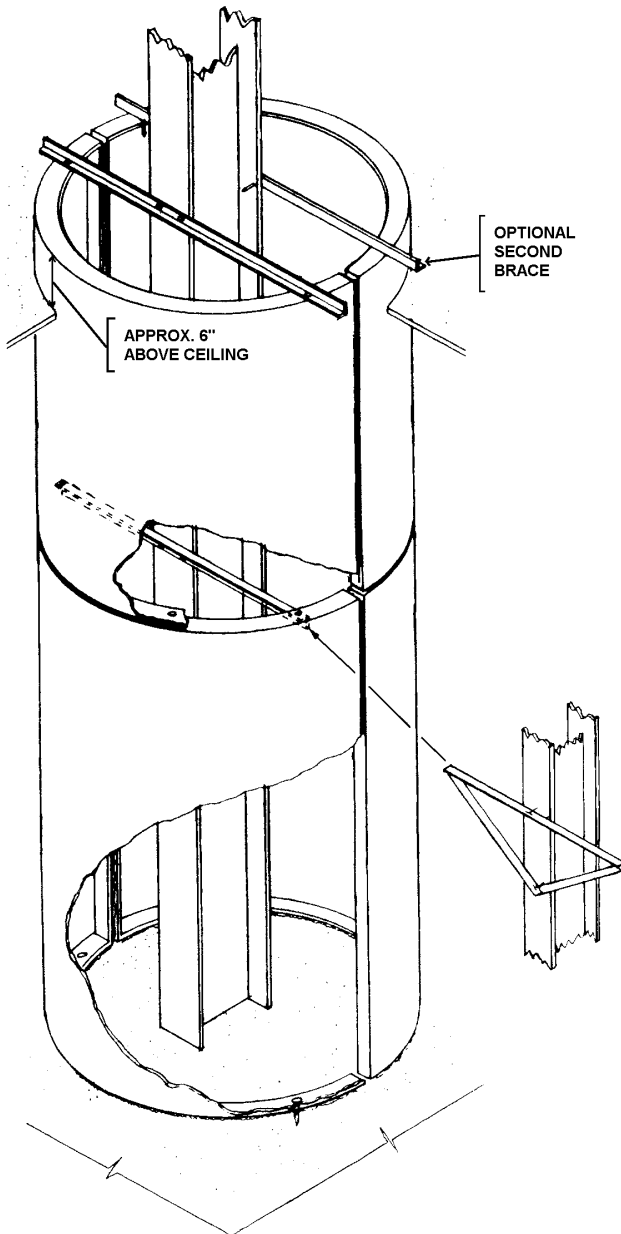

CAUTION

USE OF WATER SOLUBLE
 EXTERIOR JOINT FILLER IS NOT
 RECOMMENDED. USE FIBERGLASS
 JOINT TAPE AND WEATHR ROK
 JOINT COMPOUND.

- Step 1.** Plumb the column to be decoratively covered with Plastrglas™.
- Step 2.** Begin with the first (lowest) row of the stack. Put a bead of construction mastic on the lower end flange (the end WITHOUT a horizontal facial drywall taper) and set the first half of the column cover in the appropriate place (shim irregular floor as necessary).
- Step 3.** Secure the lower end flange to the floor, using a power driven fastening device. Ensure that you place the fasteners where the flange is in firm contact with the floor or a shim. At least two fasteners (one each side per sketch) are required to hold both column halves in place until the mastic dries.
- NOTICE:** A metal shim/washer under the fastener head should prevent possible drive through.
- Step 4.** Attach an angle brace (see sketch) to the column being covered, just under the upper end flange (end WITH a horizontal facial drywall taper). Then screw the upper end flange to an angle brace.
- NOTICE:** If the "stack unit" will be three or more lengths high, use the "knee brace" style of angle brace to redistribute additional weight gain. Alternate knee brace from one side to the other as you build upwards. Caulk all stack joints.
- Step 5.** Put a bead of construction mastic (PL PREMIUM or a similar product) on each of the vertical flanges and the lower end flange of the second column cover half, and then set against the first half.
- NOTICE:** The **Two-Bit Clip™** system by Plastrglas™ eliminates banding. The **Two-Bit Clip™** in combination with glue at the joints helps to align and fasten Weathr Rok™ units to each other for top quality installation.
- Step 6.** Insert the **Two-Bit Clip™** every 2'6" and tighten uniformly until both sides of the column cover are flush. Leave **Two-Bit Clips™** in at least 24 hours prior to finishing, allowing mastic to dry.
- NOTICE:** The **Two-Bit Clips™** do not have to be removed; however, on smaller diameter column covers it may be necessary
- Step 7.** After mastic is completely dry, tape and finish both vertical joints. Use only Weathr Rok™ accessories as provided.
- Step 8.** Clean up debris. The Weathr Rok™ column cover is now ready to be prepared for painting or other specified finishes.

